 


Please read this manual carefully, so that you can

Thank you for your support of our products. To know the product



uninstall back cover

Back cover: install and uninstall

install back cover



uninstall batterv

4



USIM(PSAM) card:install and uninstall

■ install USIM(PSAM)




uninstall USIM(PSAM)




Multifuctional Docking base(optional):

Front view

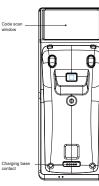


4 4 -0

Back view

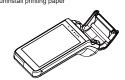


POS Terminal Base (optional):

  use the device correctly and safely.







Boot/Shutdown/Sleep/Wake up the machine

ong press the ON/OFF key for about 3s, and it will appear the booting pic, then loading boot animation until enter home menu. Please be patient when you are first time to boot up the device.

Please long press the ON/OFF key for 1s, it will pop up a menu, click the "Power off" to shutdown the device. Short press the ON/OFF key to sleep or wake up the

Charging for the battery

Back View

Before using the device at the first time or the battery is not used for a long time, you should charge the battery firstly. In the state of the power on or off, please ensure

to use. Using the charger or cable without permission may cause the battery explosion or damage the equipment.





Using the touch screen

Touch once, select or





Quickly scroll it up,down,left Click on one item and last or right to browse the list or the screen.

Double-click

quickly.

Click on an item twice



Point together Open the two fingers on the drag it to a new position screen, and then magnify or reduce the screen through the finger points apart or

together



Troubleshooting

boot up.

When the battery has run out and it is unable to charge, please

Battery: install and uninstall

install battery

The device shows network or service error message When you're in the place where the signal is weak or receiving badly, it may be lost the absorptive capacity. So please try again after moving to other places.

. If the touch screen is scratched or damaged, please contact seller

program or restart it. If the device is frozen or slow, long press the power button for 6 seconds, then it will automatically restart

will use more power, so we recommend to close the functions when it is not in use

Can't find another Bluetooth device

To ensure that the device has started the Bluetool

After pressing the power button, the device does not

replace it When the battery is too low, please charge it.

Touch screen response slowly or is not correct

•If the device has a touch screen but the touch screen response.

is not correct, please try the following:

Remove any protective film from the device.
Please make sure that your fingers are dry and clean when you click the buch screen.
To remove any temporary software error, please restart the device.

Device is frozen or severe mistake olf the device is frozen or hang, it may need to shut down the

Standby time is short Use the functions such as Bluetooth/WLAN/GPS/Data usage,

Close the programs running in the background to save the

Make sure that the distance between the two device is within

Use Notes

Operating environment

•Please do not use this device in the thunderstorm weather because the thunderstorm weather can cause equipment failure or electric shock hazard

integrated circuit board to corrode.

. Don't store or use the device in a dusty or dirty place.

temperature of the equipment rises, moisture will be generated inside., and it might damage the circuit board.

•Do not attempt to disassemble the device, Non-professional

 Do not throw, beat or intense crash the device, because rough reatment will destroy the parts of device, and it may cause the

Children's health

 This device is not toys, so children should be under adult The charger security

When charging the device, power sockets should be installed near the device and should be easy to connect. And the areas must be far away from the debris, flammable or chemicals. Please do not fall or crash the charger. When the charger shell

damaged, please ask the vendor for replacement.

•If the charger or the power cord is damaged, please do not continue to use, so as to avoid electric shock or fire.

Please keep the equipment away from rain, moisture and liquids which containing acidic substances, otherwise it will cause the

 Don't storethe device in overheating, high temperature,or it will shorten the life of electronic devices. . Don't store the device in a too cold place, because when the

operations may damage device.

Please put the device and the accessories where the children

screen from leaving the strip traces.

Please do not fall or crash the charger. When the charger shell damaged, please ask the vendor for replacement.

•Please do not use wet hand to touch the power cord.

•IF the device needs to connect USB port, please make sure the

USB contains USB port - IF logo and its performance is in accordance with the relevant specification of the USB - IF. The battery safety

 Do not short the battery or use a metal or other conductive objects to contact with the battery terminal.

Please do not disassemble, squeeze, twist, pierce or cut the

Please do not insert foreign body in the battery contact the

battery with water or other liquid, make the cells exposed to fire, explosion or other risk sources.

•Do not put or store the battery in high temperature environment.

Please do not put the battery in a microwave or in the dryer. Please do not throw the battery into the fire.

If there is a battery leak, do not let the liquid on the skin or eyes,

and if accidentally touched, please rinse with plenty of water, and

ask the doctor for help immediately. When a device in standby time obviously shorter than in the normal time, please replace the battery

Repair and Maintenance Don't use strong chemicals or powerful detergent to clean the device. If it is dirty, please use a soft cloth to clean the surface

with a very dilute solution of glass cleaner. Screen can be wiped with alcohol cloth, but be careful not to let the fluid accumulate around the screen. Dry the display with a soft non-woven cloth immediately, in order to prevent the

E-waste Disposal Declaration

E-Waste refers to discarded electronics and electronic equipment (WEEE). Ensure that an authorized agency repairs devices when needed. Do not dismantle the device on your own. Always discard used electronic products, batteries and accessories at the end of their life cycle; use an authorized collection point or collection center.

Do not dispose of e-waste into garbage bins. Do not dispose of batteries into household waste. Some waste contains hazardous chemicals if not disposed properly. Improper disposal of waste may prevent natural resources from being reused, as well as release toxins and greenhouse gases into

Technical support is provided by the Company's regional





