
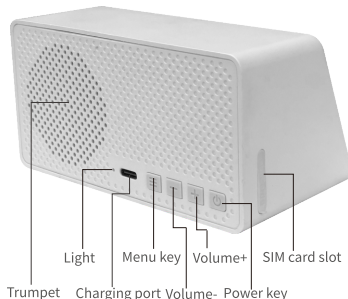







<div><div>SMART EAK</div><div><div>User Manual for QR70</div><div>(V1.0)</div></div><div></div><div>Please read this manual before installation.</div></div>	<div><div>Product overview</div><div>1.Product button interface description</div><div></div><div>- 1 -</div></div>	<div><div>Function operation instructions</div><div>1.Description of key functions</div><table><tr><th colspan="2">Key description</th><th>Function description</th></tr><tr><td rowspan="2">Volume “+”</td><td>Short press</td><td>Press it to increase the volume</td></tr><tr><td>Long press</td><td>Play latest transaction audio</td></tr><tr><td rowspan="2">Volume “-”</td><td>Short press</td><td>Press it to decrease the volume</td></tr><tr><td>Long press</td><td>Switch between Mobile data and Wi-Fi network connection</td></tr><tr><td rowspan="2">Menu key</td><td>Short press</td><td>Play battery value, network status, server connection status</td></tr><tr><td>Long press</td><td>Long Press and hold 3sec to enter Wi-Fi connection settings</td></tr><tr><td>Power key</td><td>Long press</td><td>Press and hold 3sec to Power on/off device</td></tr></table><div>- 2 -</div></div>	Key description		Function description	Volume “+”	Short press	Press it to increase the volume	Long press	Play latest transaction audio	Volume “-”	Short press	Press it to decrease the volume	Long press	Switch between Mobile data and Wi-Fi network connection	Menu key	Short press	Play battery value, network status, server connection status	Long press	Long Press and hold 3sec to enter Wi-Fi connection settings	Power key	Long press	Press and hold 3sec to Power on/off device	<div><div>2. Description of the indicator</div><table><tr><th>Type</th><th>Illustrate</th></tr><tr><td>Order indicator</td><td>The green light flashes</td></tr><tr><td rowspan="3">Charging indicator</td><td>Shutdown and charging: charging red light on, full red light off, green light on; The green light goes off after unplugging the USB charging cable</td></tr><tr><td>Charging at startup: charging red light on, full red light off, green light on; The green light goes off after unplugging the USB charging cable.</td></tr><tr><td>After that, the network indicator is lit (the indicator status is not broken during charging.)</td></tr><tr><td>Low battery</td><td>The battery level is less than 10%, the red light flashes, and every 3 minutes it announces "Low battery, please charge"</td></tr><tr><td>Network LEDs</td><td>During the network connection, the green light flashes; During the server connection, the blue light flashes; The blue light is solid after the server connection is successful</td></tr></table><div>- 3 -</div></div>	Type	Illustrate	Order indicator	The green light flashes	Charging indicator	Shutdown and charging: charging red light on, full red light off, green light on; The green light goes off after unplugging the USB charging cable	Charging at startup: charging red light on, full red light off, green light on; The green light goes off after unplugging the USB charging cable.	After that, the network indicator is lit (the indicator status is not broken during charging.)	Low battery	The battery level is less than 10%, the red light flashes, and every 3 minutes it announces "Low battery, please charge"	Network LEDs	During the network connection, the green light flashes; During the server connection, the blue light flashes; The blue light is solid after the server connection is successful	<div><div>3.Network Settings</div><div>Long press "Volume -" key to switch between Mobile Data or Wi-Fi connetion(optional).</div><div>Steps for wifi mode configuration:</div><div>Steps:</div><div>1.Long press "Volume -" key to switch work on Wi-Fi connetion when lisen a audio of "Wi-Fi connection model".</div><div>2.Long press "Menu" key to enter into AP connection set up model when lisen an audio of "AP connection setting".</div><div>3.Use a smart mobile phone ,and open the Wi-Fi ,connect to QR70_SN xxxxxx. (xxxxxx is last 6 bits of DSN code device's.)</div><div>4.Mobile phone scan the QR code(Figure 1) or input: http://192.168.1.1:80/ on browser to open setting surface.</div><div>5.Input Wi-Fi connection name , and password and confirm it(Figure 2).</div><div>if connection success, it will get below(Figure 3).</div><div>- 4 -</div></div>
Key description		Function description																																			
Volume “+”	Short press	Press it to increase the volume																																			
	Long press	Play latest transaction audio																																			
Volume “-”	Short press	Press it to decrease the volume																																			
	Long press	Switch between Mobile data and Wi-Fi network connection																																			
Menu key	Short press	Play battery value, network status, server connection status																																			
	Long press	Long Press and hold 3sec to enter Wi-Fi connection settings																																			
Power key	Long press	Press and hold 3sec to Power on/off device																																			
Type	Illustrate																																				
Order indicator	The green light flashes																																				
Charging indicator	Shutdown and charging: charging red light on, full red light off, green light on; The green light goes off after unplugging the USB charging cable																																				
	Charging at startup: charging red light on, full red light off, green light on; The green light goes off after unplugging the USB charging cable.																																				
	After that, the network indicator is lit (the indicator status is not broken during charging.)																																				
Low battery	The battery level is less than 10%, the red light flashes, and every 3 minutes it announces "Low battery, please charge"																																				
Network LEDs	During the network connection, the green light flashes; During the server connection, the blue light flashes; The blue light is solid after the server connection is successful																																				
<div><div></div><div>Figure 1</div><div><div>AP network description</div><div><div>WiFi name</div><div>Wifi password</div><div>Submit</div></div></div><div>Figure 2</div><div><div>WiFi network distribution is successful</div></div><div>Figure 3</div><div>- 5 -</div></div>	<div><div>Precautions and after-sales service</div><div>1.Use Notes</div><div>The operating environment</div><div>● Please do not use this device in the thunderstorm weather, because the thunderstorm weather may result in the equipment failure, or click the danger.</div><div>● Please put the equipment from rain, moisture and liquids containing acidic substances, or it will make the electronic circuit boards corrosion.</div><div>● Don’ t store the device in overheating, high temperature,or it will shorten the life of electronic devices.</div><div>● Don't store the device in a too cold place, because when the device’ s temperature rises, moisture can form inside, and it might damage the circuit board.</div><div>● Do not attempt to disassemble the device, non-professional personnel handling can damage it.</div><div>- 6 -</div></div>	<div><div>● Do not throw, beat or intense crash the device, because rough treatment will destroy the device’ s parts, and it may cause the device failure.</div><div>Children's health</div><div>● Please put the device, its components and accessories in the place where children can't touch.</div><div>● This device is not toys, so children should be under adult supervision to use it.</div><div>The charger safety</div><div>● The rated charge voltage and current of QR70 are DC 5V/1A. Please select the power adapter of appropriate specifications when charging the product.</div><div>● To buy a power adapter, choose an adapter that is BIS certified and meets the device specifications.</div><div>● When charging the device, power sockets should be installed near the device and should be easy to hit.And the areas must be far away from the debris, flammable or chemicals.</div><div>● Please do not fall or crash the charger.When the charger shell</div><div>- 7 -</div></div>	<div><div>damaged, please ask the vendor for replacement.</div><div>● If the charger or the power cord is damaged, please do not continue to use, so as to avoid electric shock or fire.</div><div>● Please do not fall or crash the charger.When the charger shell damaged, please ask the vendor for replacement.</div><div>● Please do not use wet hand to touch the power cord, or with power supply cable way out the charger.</div><div>2.Maintenance</div><div>● Don't use strong chemicals or powerful detergent to clean the device.If it is dirty, please use a soft cloth to clean the surface with a very dilute solution of glass cleaner.</div><div>● Damage caused by water, unauthorized dismantling of the device or external forces will cause the equipment not to be repaired.</div><div>E-waste Disposal Declaration</div><div>E-Waste refers to discarded electronics and electronic equipment (WEEE).Ensure that an authorized agency repairs</div><div>- 8 -</div></div>	<div><div>devices when needed. Do notdismantle the device on your own. Always discard used electronicproducts, batteries and accessories at the end of their life cycle; use anauthorized collection point or collection center.</div><div>Do not dispose of e-waste into garbage bins. Do not dispose of batteriesinto household waste. Some waste contains hazardous chemicals if notdisposed properly. Improper disposal of waste may prevent naturalresources from being reused, as well as release toxins and greenhousegases into the environment.</div><div>Technical support is provided by the Company's regional Partners.</div><div></div><div>www.pinetree.in</div><div> 1800 8334 666</div><div>- 9 -</div></div>																																	